First Alert®

MANUAL # M08-0292-004

www.FirstAlert.com

Operation & Installation Guide

First Alert®

6720F / 6740F

Gun Safe

THEFT

FIRE 30minutes /1100°F RATED

MANUAL # M08-0292-004

INDEX

Overview of Your Safe 1
Opening and Closing Your Safe 3
Use, Care and Maintenance 4
Additional Features 5
Consumer Affairs 6
Limited Warranty 8
Safe Identification Record 10

PACKAGE CONTENTS

1 Manual

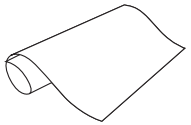
1 Rubber Floor Mat

12 Shelf Support Clips

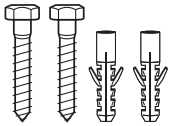
1 Mounting Hardware Kit

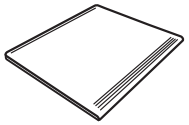
2 Removable Shelf

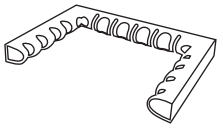
1 Removable Gun Rack

MODEL 6720F ONLY

2 Companion Entry Keys

YOU WILL NEED


1 Flathead Screwdriver

1 Power Drill with a ⅝" drill bit

⚠ IMPORTANT: DO NOT RETURN SAFE TO STORE

If you are missing parts or have any other questions pertaining to its proper use and care, **DO NOT RETURN** your safe to the store. Please contact Consumer Affairs at **1-800-323-9005, 7:30 a.m. – 5 p.m.** Central Standard Time, Monday through Friday. To assist us in serving you, please have the model number and date of purchase available when calling.

FOR YOUR PROTECTION

- Do not remove the serial number tag from the safe.
- Store emergency override keys away from safe, NEVER INSIDE.
- Record all safe identification numbers on Safe Identification Record (page 10).
- Save this manual and NEVER keep it inside the safe.

OVERVIEW OF YOUR SAFE

Congratulations!

Your new First Alert® Gun Safe will provide secure protection for your firearms, ammunition and documents. All First Alert® safes are designed and built using the highest manufacturing standards to ensure maximum user satisfaction under a variety of conditions. With proper care, your First Alert® safe will provide peace of mind for many years to come.

OPENING SAFE FOR THE FIRST TIME (MODEL 6720F)

MODELS WITH KEY LOCK ONLY:
Familiarize yourself with your key and lock. Note the notch on the head of the key and the small dot on the lock.

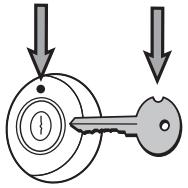

1. Insert the key into the lock, aligning the notch on the key with the dot on the lock.
2. Turn the key one- quarter turn to the right. Do not force the key, or it could break.

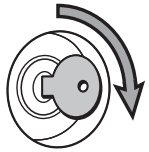

3. Grab the lever handle and move it to the left. Then pull the door open.

NOTE: KEY WILL NOT TURN IF THE LEVER HANDLE IS IN THE OPEN POSITION. FORCING THE KEY TO TURN WITH THE HANDLE IN THIS POSITION MAY DAMAGE THE KEY.

CLOSING YOUR SAFE (6720F)

MODELS WITH KEY LOCK ONLY:

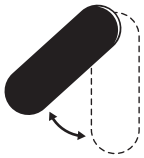

1. Close door.
2. Grab the lever handle and move it to the right.
3. Insert the key into the lock, aligning the notch on the key with the dot on the lock.

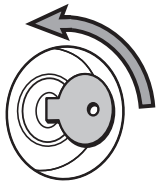

4. Turn the key one- quarter turn to the left. Do not force the key, or it could break.
5. Remove the key and store it in a safe place away from the safe.

OPENING SAFE FOR THE FIRST TIME (MODEL 6740F)

MODELS WITH COMBINATION LOCK ONLY:
Test your combination several times with the door open to make sure that you have the right combination and know how to operate the safe properly. After you have practiced opening the safe with the door open, please proceed.

YOUR SAFE HAS A THREE-NUMBER COMBINATION.

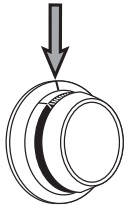

1. Start with the dial on zero.
2. Turn dial left three turns, stopping at the first number.
3. Turn dial right, stopping the second time on the second number.
4. Turn dial left, stopping the first time on the third number.
5. Grab the lever handle and move it to the left. Then pull the door open.

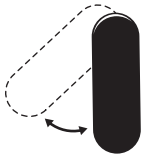

NOTE: THAT THE LOCK PLATE HAS AN INDENTED LINE AT THE 12 O'CLOCK POSITION. YOU SHOULD ALIGN THE COMBINATION NUMBERS TO THAT LINE WHEN FOLLOWING THE DIRECTIONS BELOW.

CLOSING YOUR SAFE (6740F)

MODELS WITH COMBINATION LOCK ONLY:

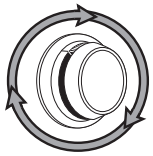

1. Close door.
2. Grab the lever handle and move it to the right.
3. Spin the combination dial at least three (3) complete turns.

USE, CARE AND MAINTENANCE

APPROPRIATE USE OF YOUR SAFE

THE 6740F PROTECTS FIREARMS, AMMUNITION AND DOCUMENTS IN CASE OF A FIRE. Testing shows that the interior temperature of the safe remains below 350°F (177°C) for 30 minutes during a fire up to 1100°F (593°C) when used properly. Your safe must be closed and latched in order to properly protect the contents from fire.

⚠ IMPORTANT

Because pearls sustain heat damage at temperatures below 350°F, we advise that you **DO NOT** store pearls in this safe.

SAFE CARE AND MAINTENANCE

When properly maintained, your safe will continue to provide protection for many years. In order to ensure optimum performance of your safe, please follow these simple precautions:

CLEAN HANDS - Do not attempt to operate combination dial if your hands have excessive dirt, debris, or liquids on them. Under normal circumstances, it is not necessary to wash your hands before using the safe.

CLEAN SAFE - To clean the outside surface of your safe, it is recommended that you use a mild cleaner (e.g., window cleaner) to avoid scratching or discoloring the surface. Do not use abrasive cleansers.

MOISTURE - We recommend that you place delicate items such as pictures or intricate jewelry into an air-tight container before storing them in your safe. Avoid placing your safe in areas of high humidity. For optimum performance, the safe should be opened and aired out for at least 20 minutes every two weeks.

For future reference, store this Operation and Installation Guide in a secure area away from the safe. **DO NOT DISCARD!**

ADDITIONAL FEATURES

SHELVES

To allow for greater flexibility and further accommodate your particular storage needs, this safe includes two (2) adjustable/removable shelves and one (1) gun rack.

TO INSTALL:

1. Remove shelves, gun rack and 12 shelf support clips from protective wrapping.
2. Each shelf will require four (4) support clips.
3. Determine the desired location of your shelf and/or gun rack and note the corresponding support guide slots on the vertical standards that are best suited to support the shelf in that location.
4. Insert one (1) support clip into each of the vertical standards. The top of the support clip should be placed into the selected slot first and then the bottom of clip will lock in place when pushed back.

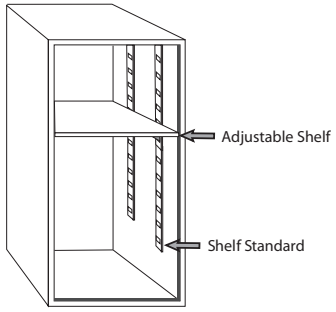

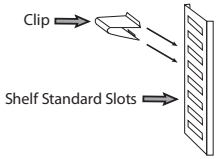

⚠ IMPORTANT

Make sure all four (4) clips are installed at the same height on the vertical standards so that the shelf is level.

5. Install the shelf into position by placing inside the safe (tilting if necessary) and lowering into position on the support clips.
6. Repeat procedure for the second shelf.

HINT: If shelves are not being used, they can be stored in the bottom of the safe.

MOUNTING HARDWARE KIT

Many customers prefer to bolt their safe to the wall or floor to increase protection from theft and resistance to tipping. This safe was manufactured with mounting holes pre-drilled in the back panel and floor panel. To secure your safe to the wall and/or floor:

1. Remove the protective liner from the back and/or floor of the safe and locate the pre-drilled 5/8 in. holes. Using a drill with a 5/8" bit, drill holes into the wall or floor.
2. Anchor the safe using the mounting hardware kit which includes two (2) 3 x 3/8 in. lag screws and anchors. Securing back of safe to wall studs is important.
3. Once completed, replace protective liners.

⚠ IMPORTANT

If you have questions regarding how to permanently secure the safe or are uncomfortable using the tools necessary to complete the project, please check with your local retailer, home center or independent contractor. This safe is heavy and care should be exercised to prevent damage to safe or mounting surface and/or bodily injury.

CONSUMER AFFAIRS

YOUR SAFE'S UNIQUE IDENTIFICATION NUMBERS

When contacting Consumer Affairs, you should be prepared to supply some important information that specifically identifies your safe. This information is extremely important to assuring prompt and accurate customer assistance.
It is strongly recommended that you identify and record the following information in the Safe Identification Record form located on the inside back cover of this manual:

MODEL NUMBER **SERIAL NUMBER** **KEY NUMBER**

LOCATING MODEL AND SERIAL NUMBERS

Most First Alert® safes include a small metallic silver or gray tag affixed to one of the surfaces. This tag is usually located on the front or right side of the safe. This tag contains the serial number, and on selected models a similar tag is attached containing the model number. If a model number tag is not attached to the safe, then it can be located on the front or side panel of the box that the safe was packaged in. Write this number down for future reference.

KEY NUMBER

The key number is located on the key. If you do not have the key, the number is also imprinted on the key lock.



⚠ IMPORTANT: DO NOT REMOVE TAGS

In case your safe becomes inoperable or you lose your keys, these identification numbers will be needed to correct the problem. It is recommended that the number tags remain in place on the safe. If removal is necessary, then they should be attached to the inside back cover of the manual. Store in a safe and secure place for future reference where you purchased this product.

HOW TO OBTAIN WARRANTY SERVICE

For Warranty Service return to:

First Alert, Inc.
Attn: Warranty Safe Returns
23610 S Banning Blvd
Carson, CA 90745

PLEASE CALL US AT 1-800-323-9005 TO ESTABLISH A WARRANTY RETURN SET-UP

RECOVERING LOST COMBINATION AND ORDERING REPLACEMENT KEYS

If you lose your combination (6740F Only) or the Companion Entry Keys (6720F Only) or would like additional keys, you can purchase them from First Alert, Inc. You must supply the following information to assure accurate processing:

1. Name / Address / Telephone Number
2. Safe Model Number / Serial Number
3. Key Number (located on the key and on the Key Lock) – ignore if requesting combination
4. Notarized statement of ownership, which can be found at firstalert.com in the lower right-hand corner of the homepage
5. Indicate number of keys requested - Ignore if requesting combination

Please send all the information via fax at 630-851-7995 or mail First Alert, Inc., 3901 Liberty Street Road, Aurora, IL 60504-8122.

Checks or Money Orders are required for orders received by mail and should be made payable to First Alert. Contact our Consumer Affairs Department for costing information prior to ordering.

Mail to:

First Alert, Inc.
Attn: Consumer Affairs
3901 Liberty Street Road
Aurora, IL 60504-8122

LIMITED WARRANTY

BRK Brands, Inc., ("BRK") warrants that for a period of five (5) years from the date of purchase, this product will be free from defects in material and workmanship. BRK, at its sole option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. You must keep the original sales receipt. Proof of purchase is required to obtain warranty performance. BRK dealers, service centers, or retail stores selling this product do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not apply to the finish on the product. This warranty does not cover normal wear and tear of parts or damage resulting from any of the following: negligent use or misuse of the product, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than BRK or an authorized service center, improper installation, or exposure to extremes of heat or humidity. Further, the warranty does not cover Acts of God, including natural disasters.

BRK shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. BRK is also not responsible for: costs associated with removing or installing the product; damage or loss of the contents of the product; nor for the unauthorized removal of the contents; or damages incurred during shipment.

Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above Warranty Period. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province, or jurisdiction to jurisdiction.

If you have any questions that cannot be answered by reading this manual, call Consumer Affairs at 1-800-323-9005.

© 2013 BRK Brands, Inc., a Jarden Corporation company (NYSE: JAH)
3901 Liberty Street Road, Aurora, IL 60504-8122
All rights reserved.
www.FirstAlert.com

SAFE IDENTIFICATION RECORD

Model Number_____

Serial Number_____

Key Number_____

3-Number Combination

Turn dial LEFT THREE (3) turns and continue to: _____

Turn dial RIGHT TWO (2) turns and continue to: _____

Turn dial LEFT ONE (1) turn stopping on: _____